




Your Complete Source for Springboard & Platform Diving Equipment and Supplies


Installation Instructions for Rubber Channel Set

1. Mix entire contents of two metal tubes thoroughly.
See MP-114 Glue Kit Instructions for details.
2. Spread a thin coating of adhesive evenly with the brush on the bottom and sides of groove.

Apply glue to the
Rubber channels

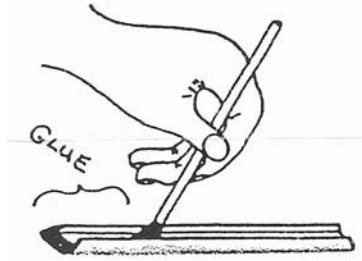

3. Press channel to rib of board. Start at one end as shown.

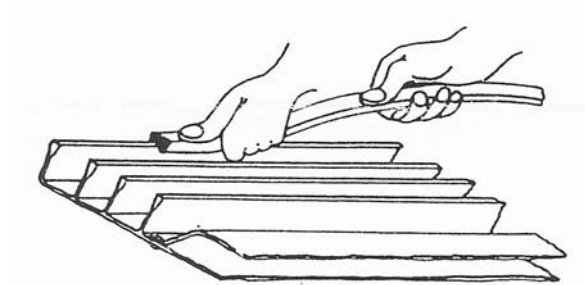

4. Place plywood board on channels and load with two 100-pound sacks of sand, cement or weights.
Let stand for 8 hours minimum at 75° F (24° C); 10 hours if cooler.

